


12585 Kirkham Court, Poway, CA 92064
 Tel: (858) 536-2927 Fax: (858) 536-2354
 www.cbtsystems.tv


1

REMOVE THE FOUR 4 HEAD PHILLIPS SCREWS FROM THE TOP AND BOTTOM OF THE HOUSING AND SET THEM ASIDE. SEPARATE THE HOUSING FROM THE BACK PLATE AND REMOVE THE WIRE NUTS AND SCREWS THAT ARE INSIDE THE BOX.

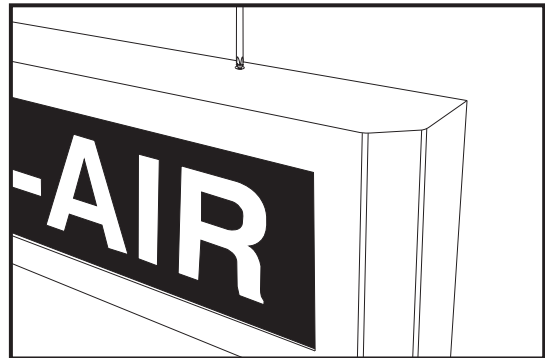


2

PRIOR TO DOING ANY ELECTRICAL WORK MAKE SURE THAT THE CIRCUIT IS SHUT OFF AT THE BREAKER PANEL. CONNECT THE WIRES WITH THE SUPPLIED WIRE NUTS. MAKE SURE THAT THE GROUND WIRE (GREEN) IS PROPERLY SECURED TO THE J-BOX OR THE COMMON GROUND.

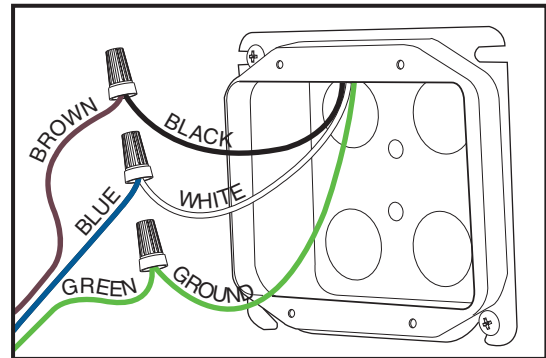



3

ATTACH THE BACK PLATE UTILIZING THE 2 KEYHOLE SLOTS ON THE LEFT AND RIGHT OF THE LENS. TO MOUNT THE HOUSING USING THE CENTER J-BOX OR VESA 75/100 HOLES YOU MIGHT NEED TO REMOVE THE FRONT LENSES.

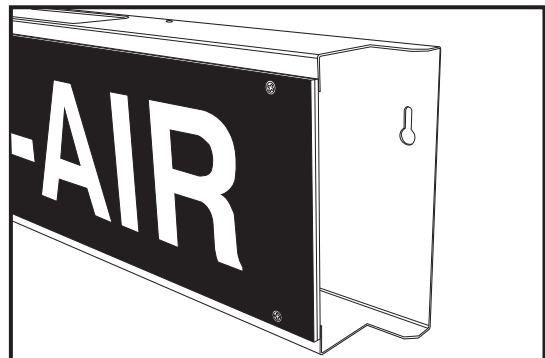

4

RE-ATTACH THE ALUMINUM HOUSING WITH THE 4 PHILLIPS FLAT HEAD SCREWS THAT WERE REMOVED IN STEP 1. CLEAN OFF ALL THE FINGERPRINTS WITH A MICRO FIBER CLOTH AND ENJOY.

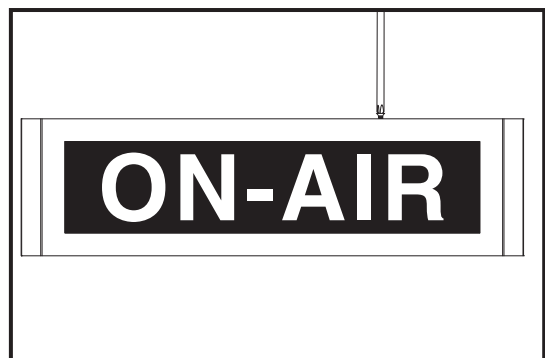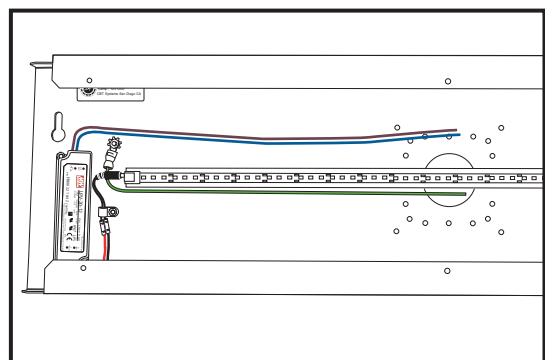


This sign is intended to be installed in accordance with the requirements of Article 600 of the National Electrical Code and/or other applicable local codes. This includes proper grounding and bonding of the sign.

12585 Kirkham Court, Poway, CA 92064
 Tel: (858) 536-2927 Fax: (858) 536-2354
 www.cbtsystems.tv


1

REMOVE THE FOUR 4 HEAD PHILLIPS SCREWS FROM THE TOP AND BOTTOM OF THE HOUSING AND SET THEM ASIDE. SEPARATE THE HOUSING FROM THE BACK PLATE AND REMOVE THE WIRE NUTS AND SCREWS THAT ARE INSIDE THE BOX.

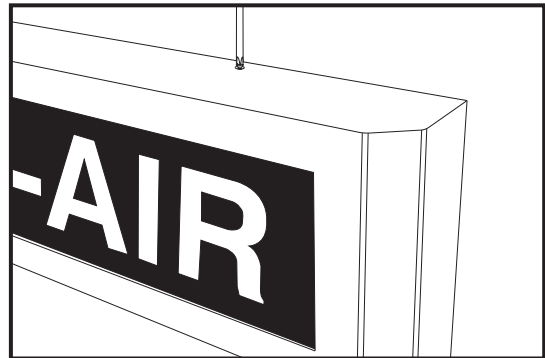


2

PRIOR TO DOING ANY ELECTRICAL WORK MAKE SURE THAT THE CIRCUIT IS SHUT OFF AT THE BREAKER PANEL. CONNECT THE WIRES WITH THE SUPPLIED WIRE NUTS. MAKE SURE THAT THE GROUND WIRE (GREEN) IS PROPERLY SECURED TO THE J-BOX OR THE COMMON GROUND. LOOK FOR THE WHITE TAPE WITH + SIGN TO IDENTIFY THE POSITIVE WIRE.

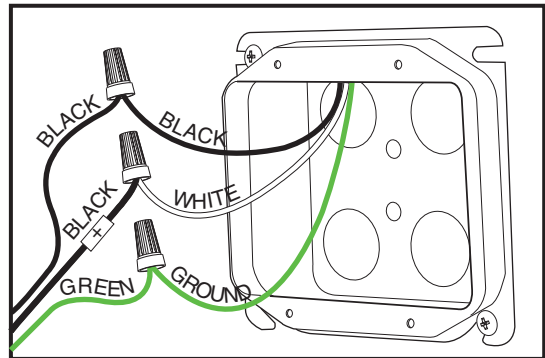



3

ATTACH THE BACK PLATE UTILIZING THE 2 KEYHOLE SLOTS ON THE LEFT AND RIGHT OF THE LENS. TO MOUNT THE HOUSING USING THE CENTER J-BOX OR VESA 75/100 HOLES YOU MIGHT NEED TO REMOVE THE FRONT LENSES.

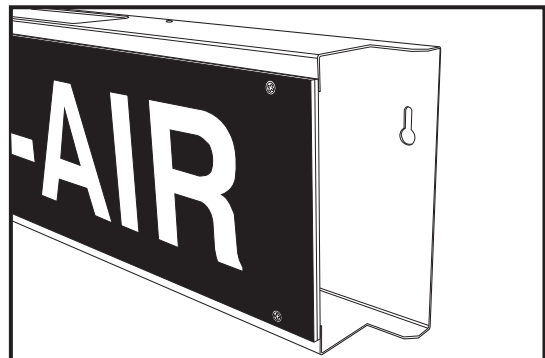

4

RE-ATTACH THE ALUMINUM HOUSING WITH THE 4 PHILLIPS FLAT HEAD SCREWS THAT WERE REMOVED IN STEP 1. CLEAN OFF ALL THE FINGERPRINTS WITH A MICRO FIBER CLOTH AND ENJOY.

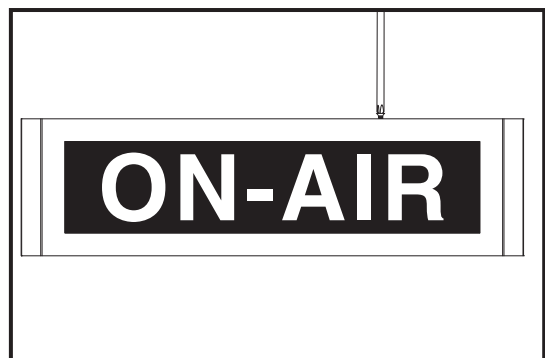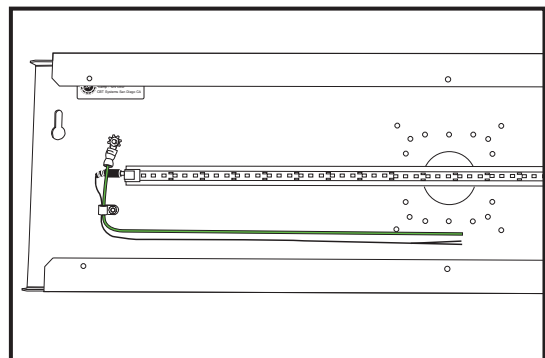

This sign is intended to be installed in accordance with the requirements of Article 600 of the National Electrical Code and/or other applicable local codes. This includes proper grounding and bonding of the sign.